


## Assembly instructions – Façade fixing screw ZK


- 1** Uniformly position the rhombus profiles.

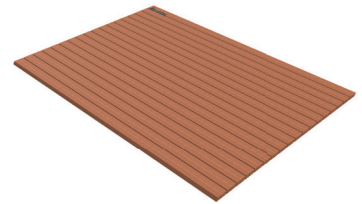


- 2** Uniformly position the substructure at right angles to the rhombus profiles.



- 3** Bolt the lowest rhombus profile to the substructure using the ZK façade screws.

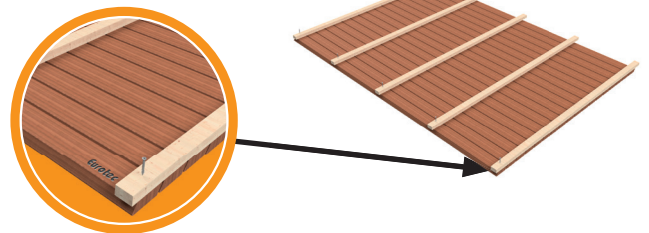

- 4** Inspect the spacing to the next rhombus profile, bolt the profile to the substructure and repeat **step 4** until all profiles are fastened.

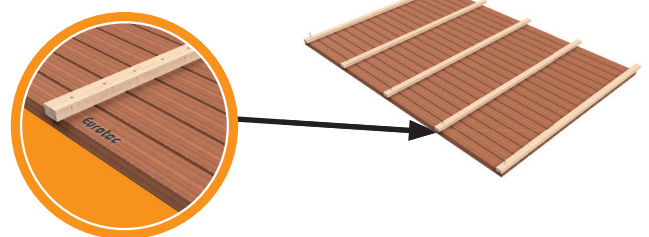

- 5** Install the wall element and mount it to the wall.

