



ASSEMBLY INSTRUCTIONS

POWERRING TRANSPORT ANCHOR

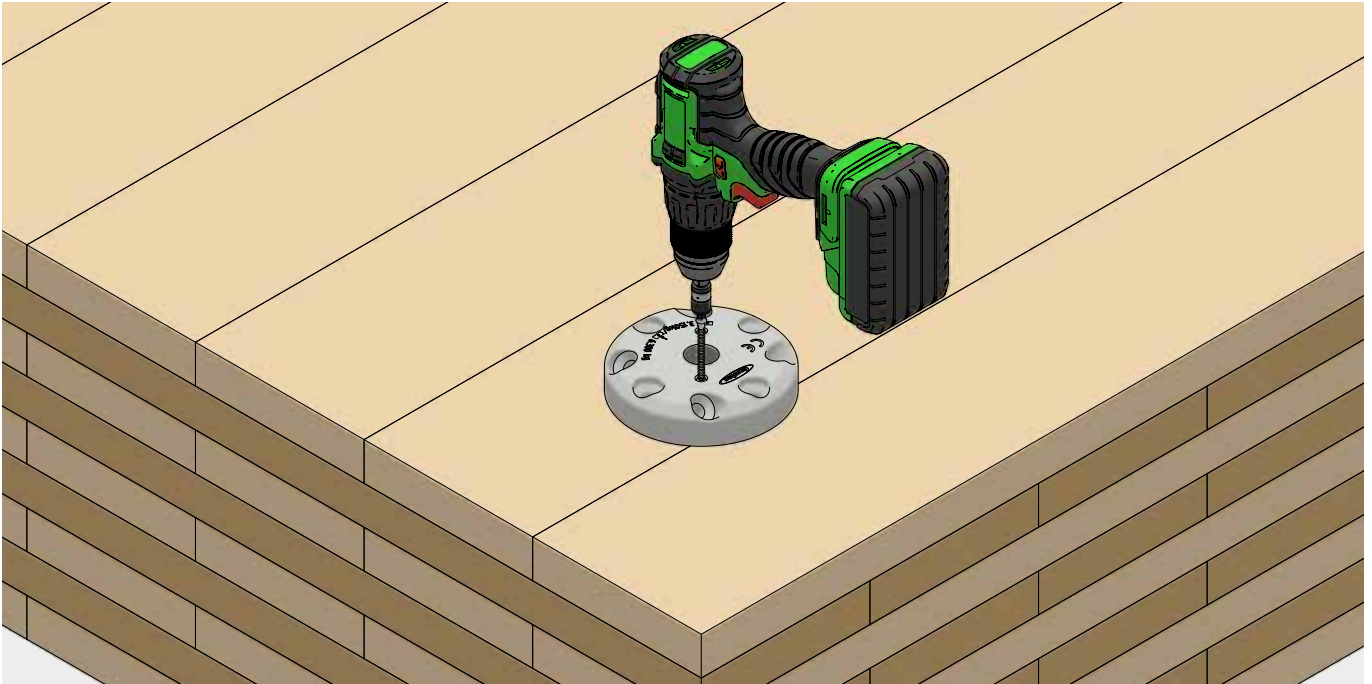


Step 1: Position the Powerring correctly, observing the minimum distances, and fasten it with the appropriate screws (angle-bracket screw).

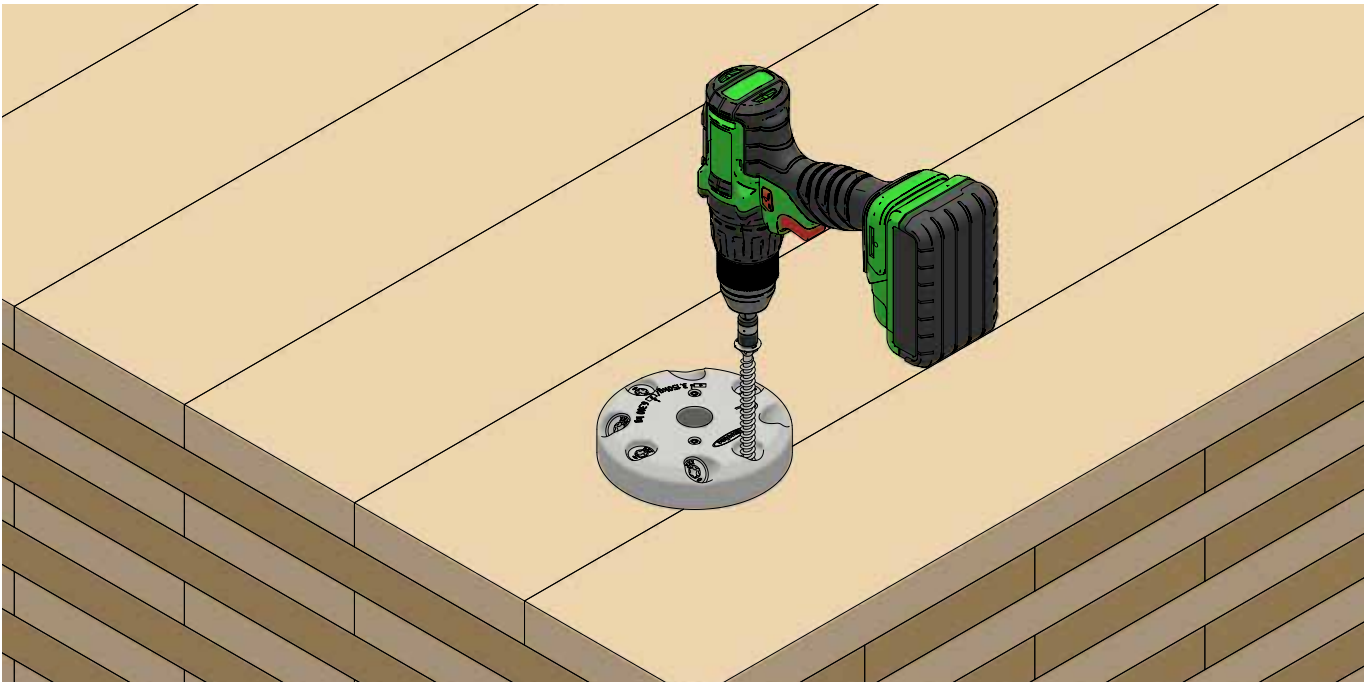

Step 2: Screw in the appropriate KonstruX screws according to the configuration (see technical data).

ASSEMBLY INSTRUCTIONS

POWERRING TRANSPORT ANCHOR

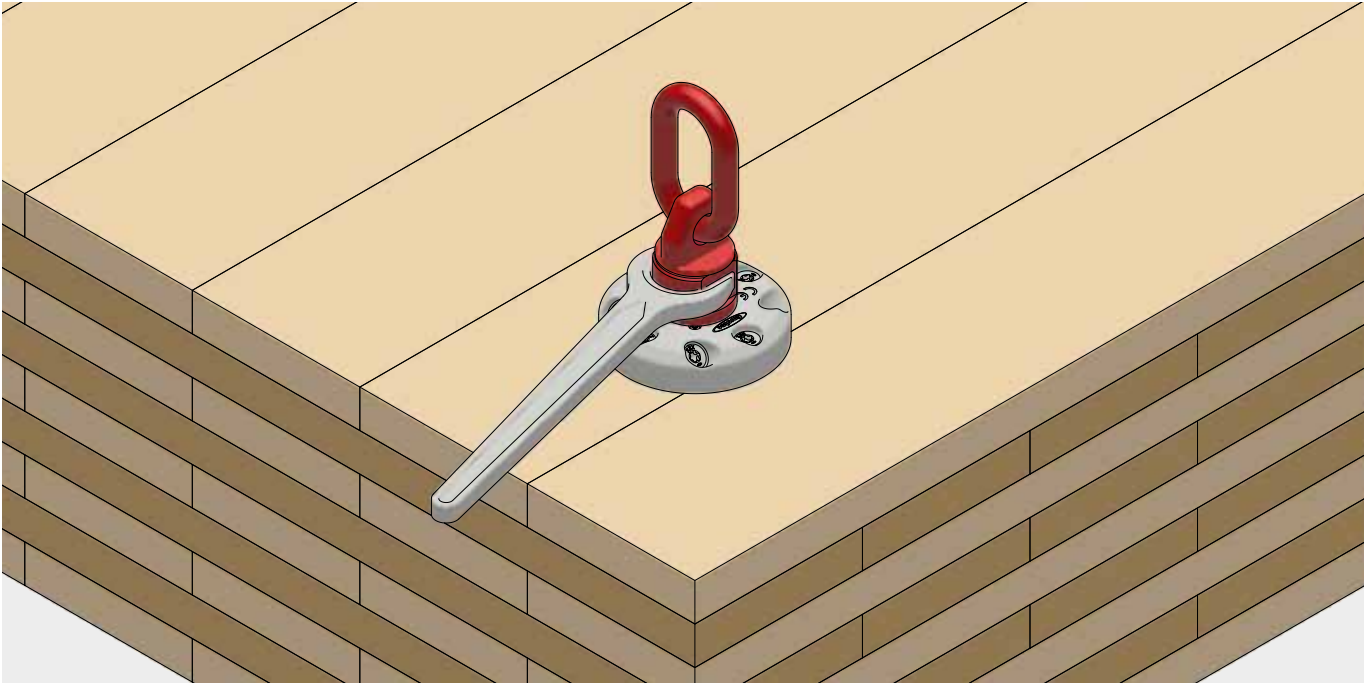

Step 3: Screw in and tighten the sling swivels.



Step 4: Hook in the Powerring at the predetermined angle (see technical data) and lift.

If you are not familiar with how this product is used, and particularly with the product's intended use, please contact our Application Technology department (Technik@eurotec.team).