

# ASSEMBLY INSTRUCTIONS

## STARTERCLIP

### PROCESSING


- StarterClip Element 1
- StarterClip Element 2

### INSTALLATION


- 1** Fix element 2 of the StarterClip to the top of the terrace substructure.



- 2** Fix element 1 of the StarterClip to the bottom of the terrace decking board.

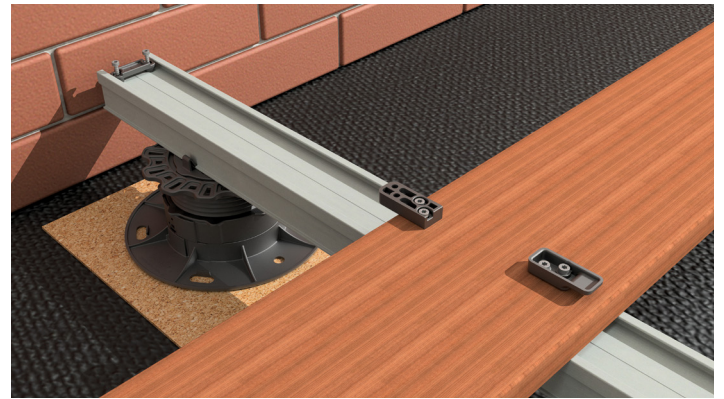

- 3** Insert element 1 into element 2. The terrace decking board is now fixed to the substructure.

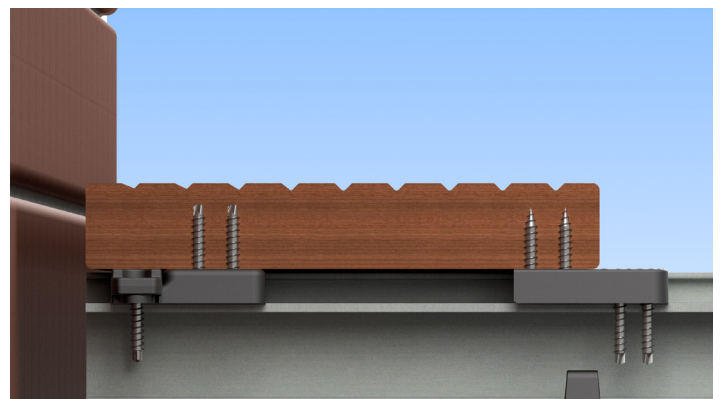

If you are not familiar with how to use this product, especially with its intended use, get in touch with our Application Engineering Department ([technik@eurotec.team](mailto:technik@eurotec.team)).