

# ASSEMBLY INSTRUCTIONS


## EVOdry WATER DRAINAGE SYSTEM

### FASTENING OPTIONS – GENERAL INFORMATION


**1** Push the EVOdry holders into the rail until they click in.



**2** Distribute EVOdry holders evenly.

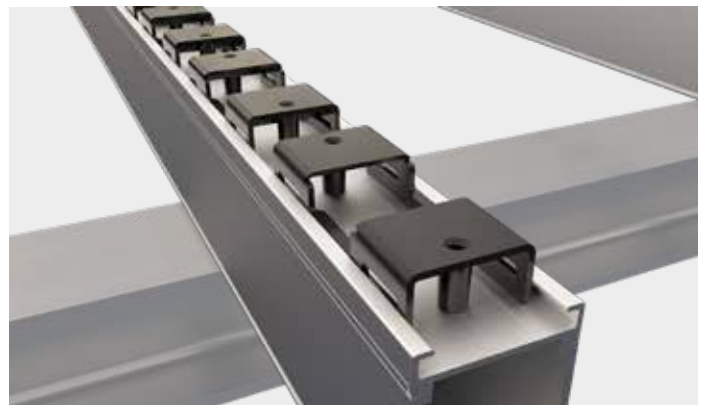

**3** Insert EVOdry rails into the EVOdry holders.

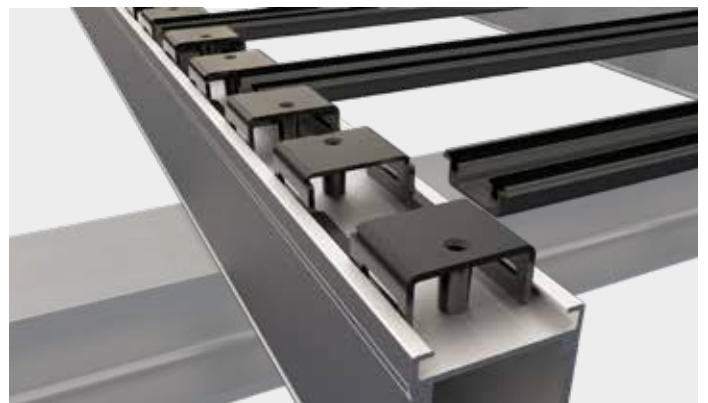

# ASSEMBLY INSTRUCTIONS

## VISIBLE FASTENING

- 1 If you have a floorboard with a height of 25 mm, fasten it with a profile drilling screw L61.




- 2 Maintain the clearance between the joints and lay the next floorboard.



# EVODRY WATER DRAINAGE SYSTEM

## CONCEALED FASTENING

- 1 Push the EVOdry clip into the EVOdry rail until it clicks in and use it only every 30 – 40 cm.

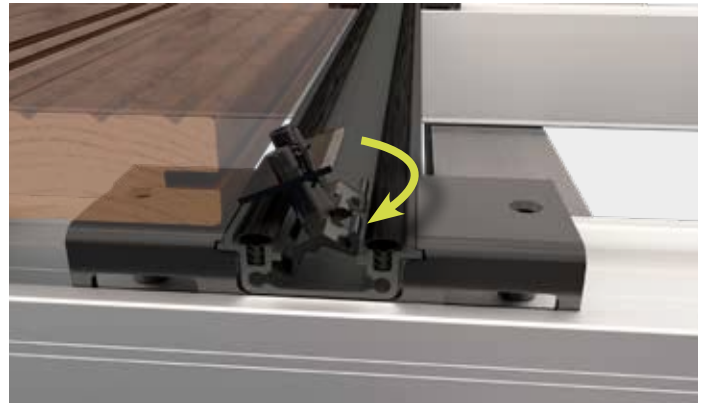

- 2 Insert the EVOdry rail with the EVOdry clips into the floorboard and affix it with a profile drilling screw L41.



- 3 Insert the second floorboard into the retaining plate of the EVOdry clip and fasten it with the screw of the EVOdry clip.



If you are not familiar with how this product is used, and particularly with the product's intended use, please contact our Application Technology department ([technik@eurotec.team](mailto:technik@eurotec.team)).