


ASSEMBLY INSTRUCTIONS

LATH HOLDER AND RIDGE BATTEN HOLDER 50

INSTALLATION


- 1 Fastening of one bracket each to the gable or crown and eaves in the case of ridge lath installation.

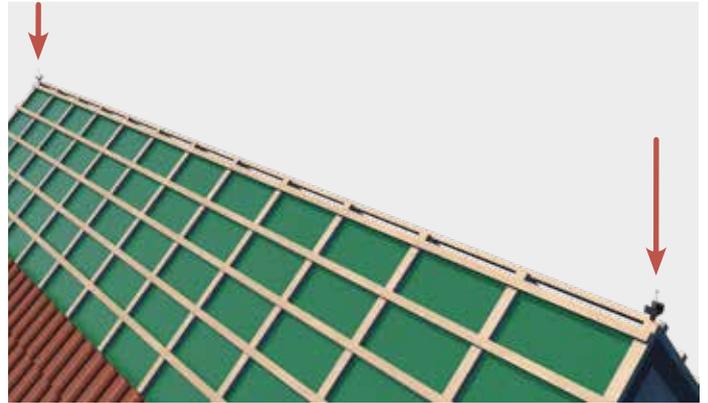

- 2 Screw the ridge and crown holder 50 vertically to a Paneltwistec countersunk head screw 6.0 (minimum embedment depth: 50 mm in the rafter).



- 3 Tighten the cord between the holders. (See magenta line)

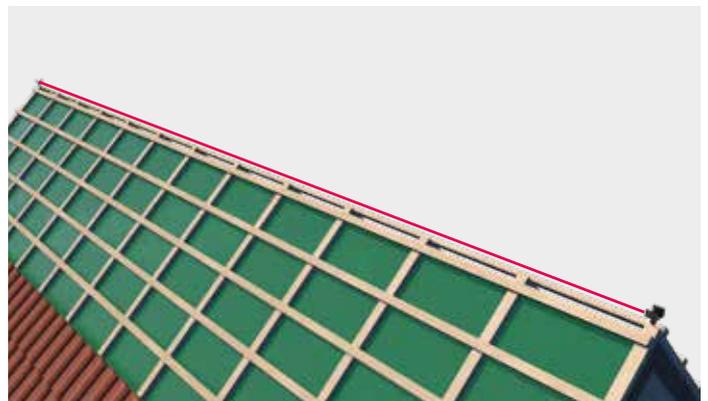


ASSEMBLY INSTRUCTIONS


- 4** Set additional holders and level to cord height.
→ Select a suitable distance (approx. 500 – 800 mm) depending on the rafter axis distance.

Screw the holders together too.

LATH HOLDER AND RIDGE BATTEN HOLDER 50

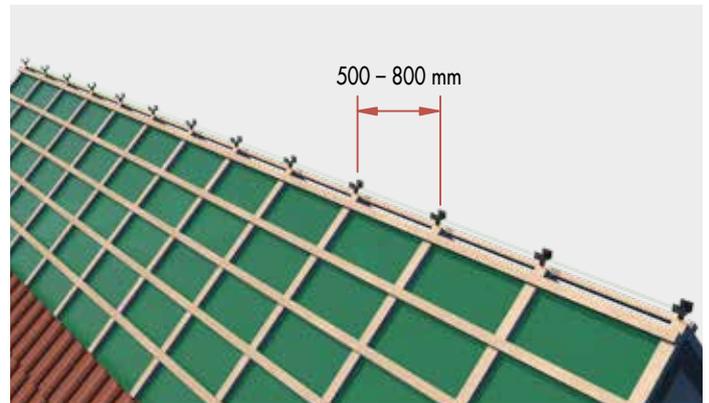

- 5** Place the crown or ridge lath in the holders.

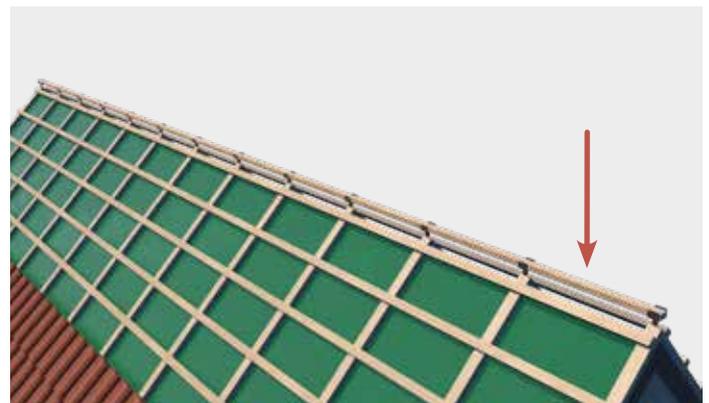

- 6** Lateral fixing with flat head or pan head screws.



If you are not familiar with how this product is used, and particularly with the product's intended use, please contact our Application Technology department (technik@eurotec.team).