



ASSEMBLY INSTRUCTIONS

POWERBLOCK TRANSPORT ANCHOR

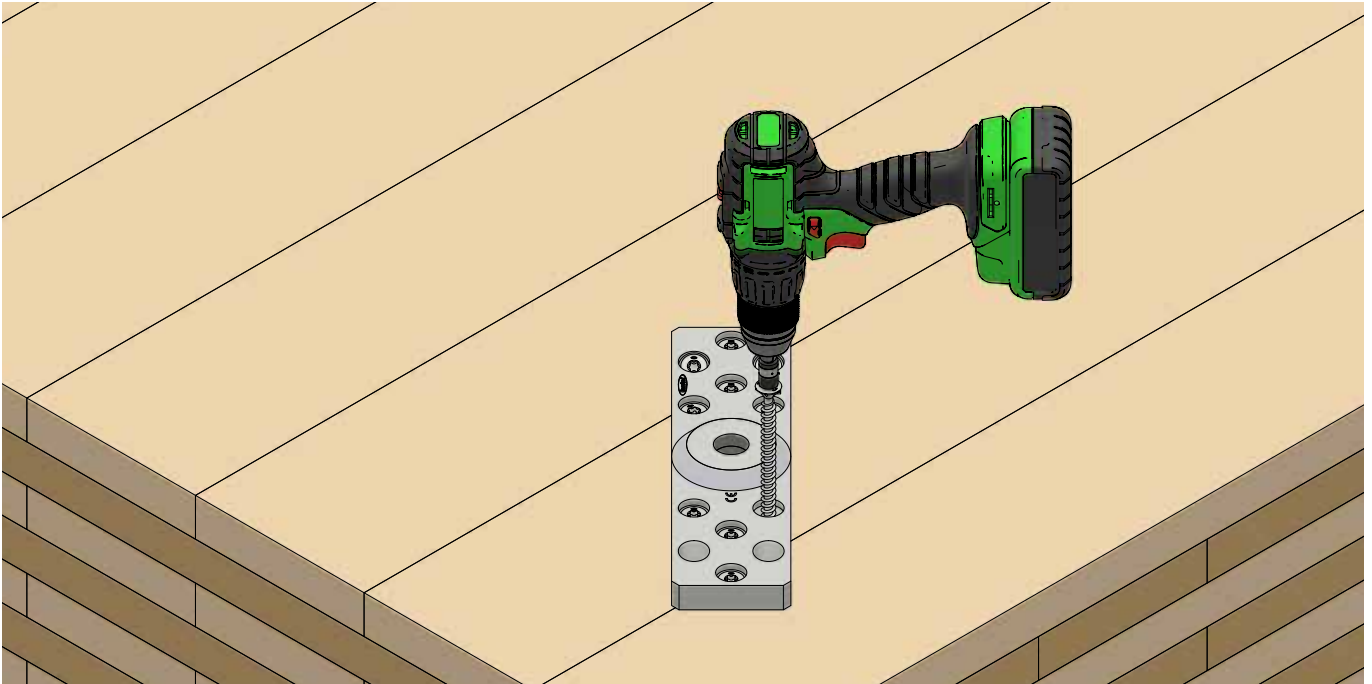


Step 1: Screw in the appropriate KonstruX screws depending on the configuration (see technical data).

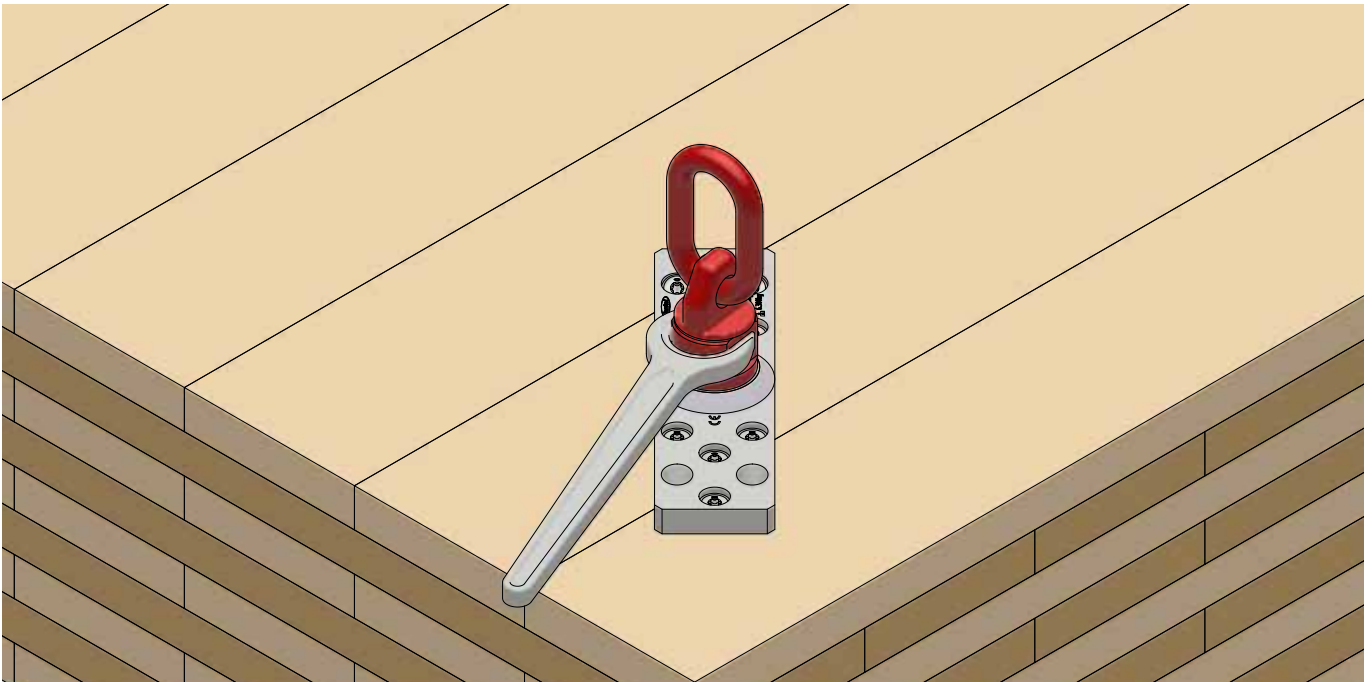

Step 2: Screw in and tighten the sling swivels.

ASSEMBLY INSTRUCTIONS

POWERBLOCK TRANSPORT ANCHOR

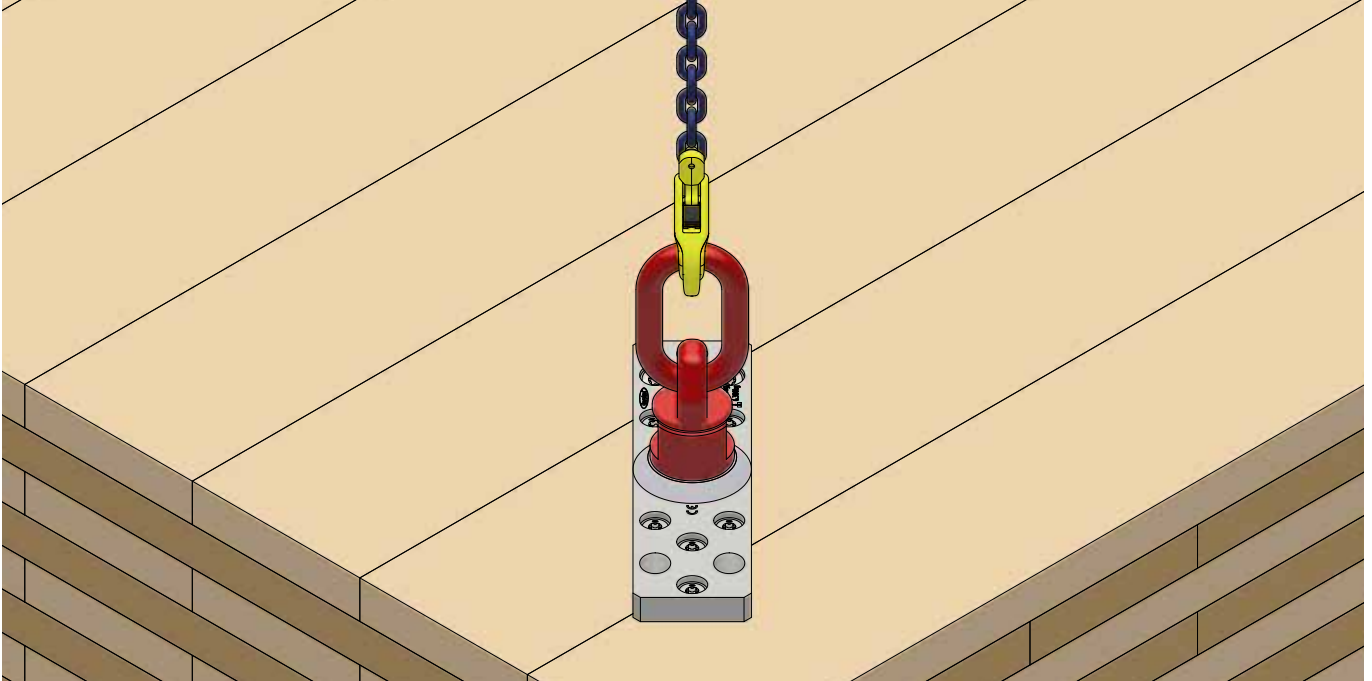

Step 3: Hook the power block at the predetermined angle (see technical data) and lift.

If you are not familiar with how this product is used, and particularly with the product's intended use, please contact our Application Technology department (Technik@eurotec.team).